
09857 - 200013 CURVE BROWN / BLACK RECTANGLE MIRROR

- OAK WITH BRONZE MIRROR


ASSEMBLY INSTRUCTIONS FOR MIRROR INSTALLATION




HARDWARE ENCLOSED




HARDWARE REQUIRED

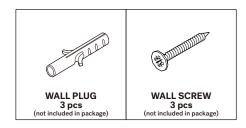


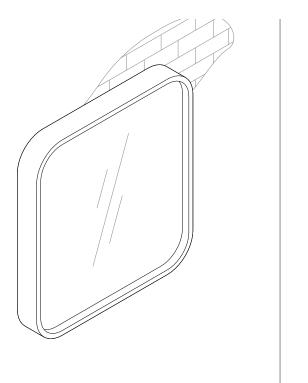

TOOLS REQUIRED

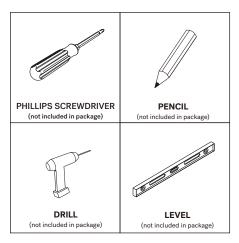


NOTICE

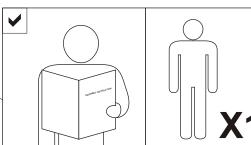

SYMBOLS











USE PHILLIPS SCREWDRIVER
TO TIGHTEN



USE PENCIL

09857 - 200013 CURVE BROWN / BLACK RECTANGLE MIRROR

- OAK WITH BRONZE MIRROR

ASSEMBLY INSTRUCTIONS FOR MIRROR INSTALLATION



